

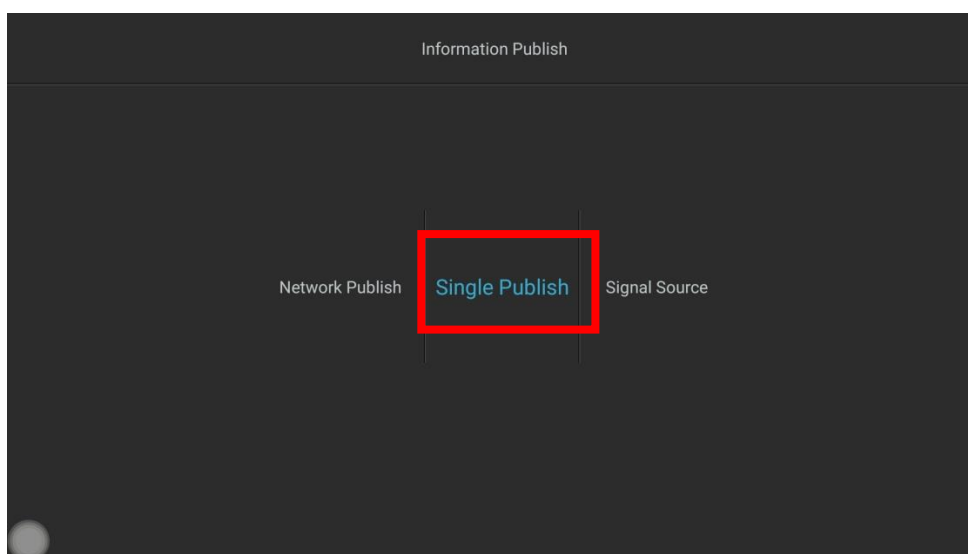


Operation Instruction on Kiosk

How to deploy your photos or videos on Kiosk directly?

1. Create the new file folder named "SProgram" in your USB drive.
2. Save the pictures and video files in the designated folder "SProgram" and insert USD drive into the USD slot on the Kiosk machine .
Unplug the USB when the copying progress finished.
3. Click "Information Publish" -->" Single Publish" , then you can select the template you preferred.

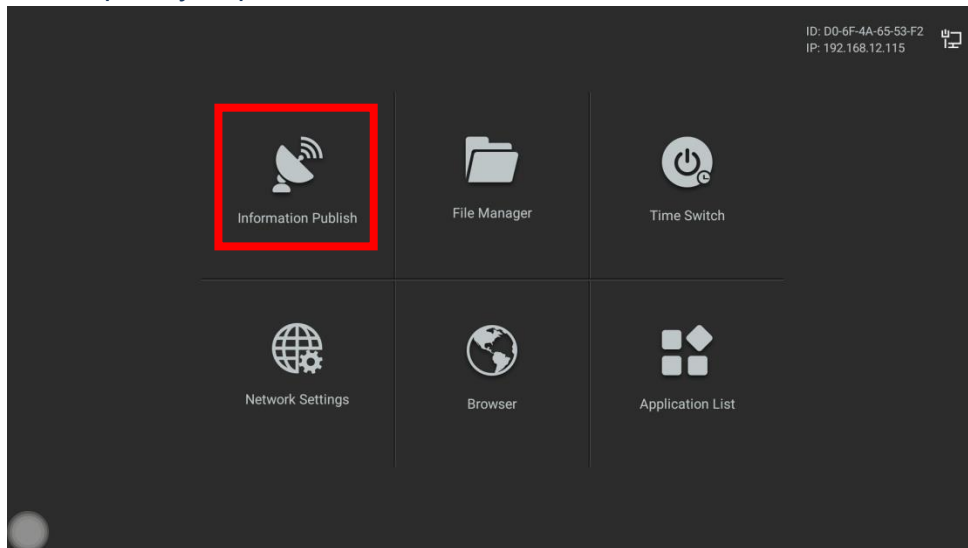

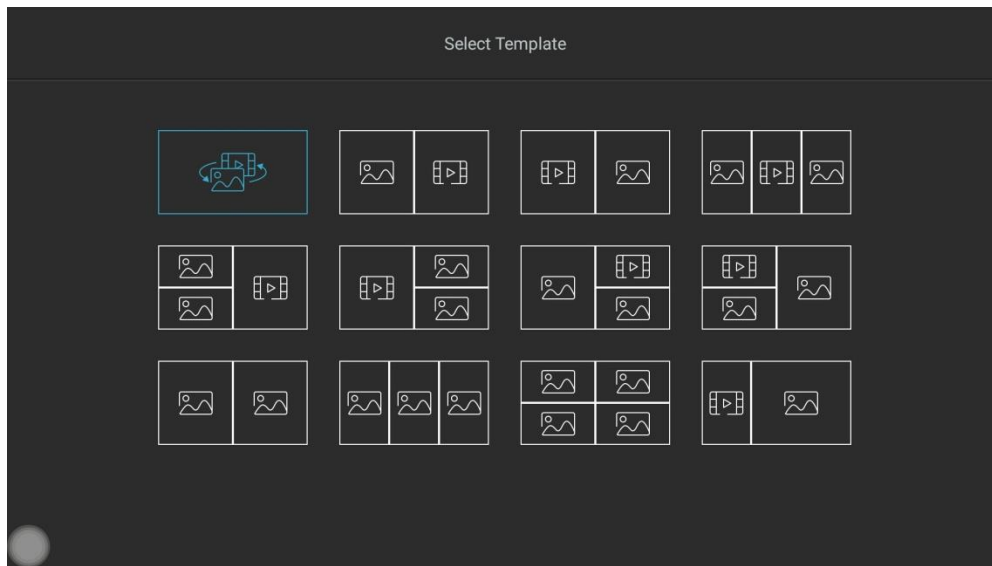

4. If you want to replace the previous content, save the new content in the "SProgram" file folder from your USB drive (Remember to delete the materials you will not use this time) and repeat the above steps.
5. After exiting the Single Publish mode, if there is no other operation within 20 seconds, it will re-enter the Single Publish Mode and play the content.

 *PERSONA*